

LOGS-CERONA36

MODELS: CERONA-36, CERONA-36-IFT

Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

CAUTION: Logs are fragile, handle with care.

NOTICE: To simplify the installation process, use Figure 1 to positively identify each individual log before beginning installation.

Note: Logs may appear different than previous CERONA-36 logs.

MODEL: CREONA-36, CERONA-36-IFT

LOGS-CERONA36	
LOG ID	SRV PART #
1	SRV2106-701
2	SRV2106-703
3	SRV2106-705
4	SRV2106-704
5	SRV2106-702
6	SRV2106-706



Figure 1



Figure 2

STEP 1. LOG #1 (SRV2106-701): Place the notch on the left underside of log #1, over the log tab that is located on the right side of the pilot bracket. Move the right end of log #1 forward until it hits the stick on the burner. The closer the log is to the burner the more glow you will get. Don't place the log too close to the burner or sooting may occur.

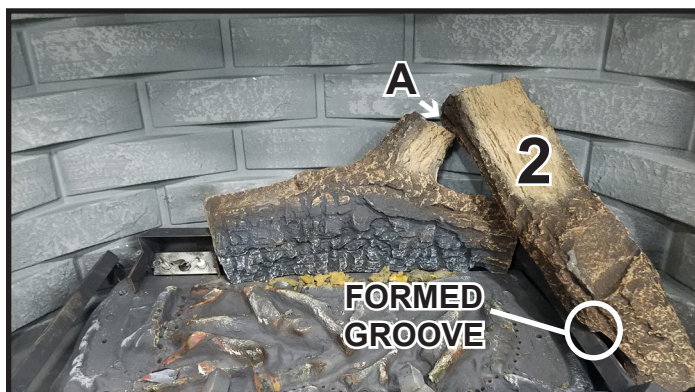


Figure 3

STEP 2. LOG #2 (SRV2106-703): Fit log #2 on the top branch of log #1 (A). Rest the formed groove of the lower part of the log on the grate. It may be necessary to tilt Log #1 forward to properly engage with Log #2.



Figure 4

STEP 3. LOG #3 (SRV2106-705): Place the "Y" portion of the log in the grate tine and rest the log on the formed portion of log #2.



Figure 4

STEP 4. LOG #4 (SRV2106-704): Log #4 is form fitted to the burner. It sits on the middle portion of the burner as shown.



Figure 5

STEP 5. LOG #5 (SRV2106-702): Place the right portion of log #5 on the formed area of log #1. Place the left side on the grate. Set the notch of the log on the grate.



Figure 6

STEP 6. LOG #6 (SRV2106-706): Rest bottom notch of log #6 on the grate tine and the top part on formed section of log #5 (A).